


# INSTALLATION INSTRUCTIONS

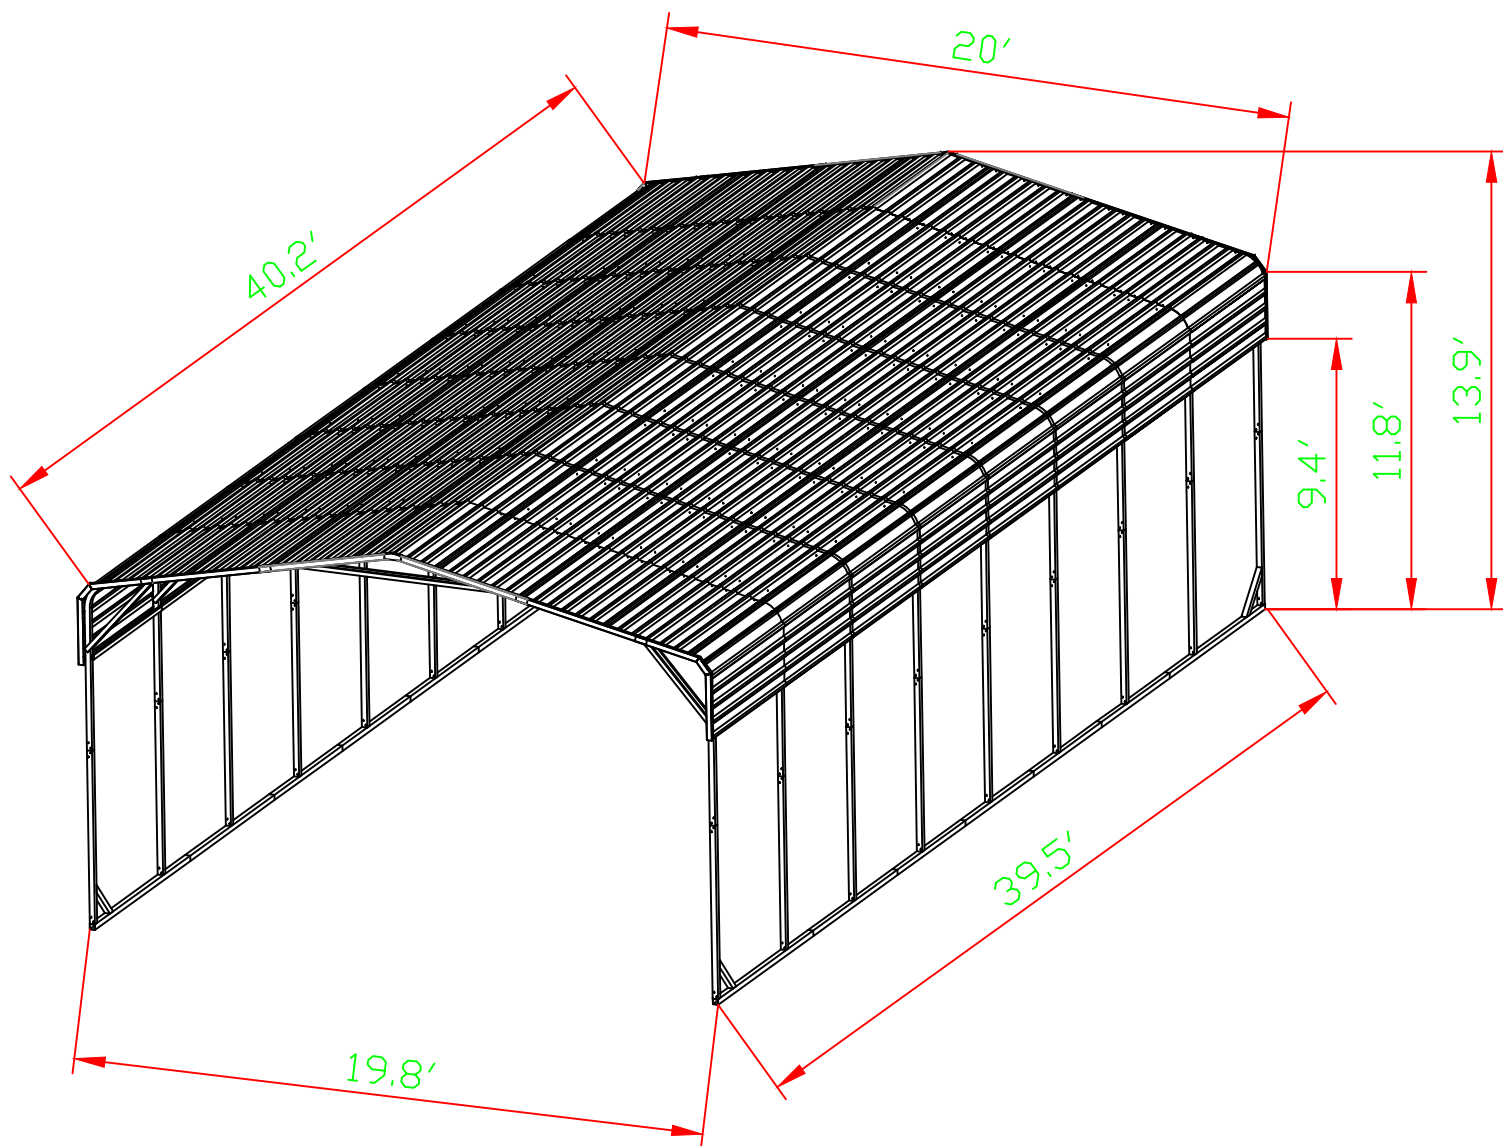




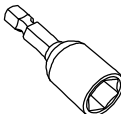

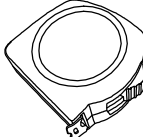
MODEL:S2040

**STEEL CARPORT**



## BEFORE YOU START
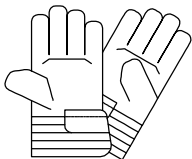
### Items Required:

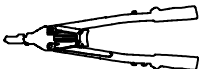
Safety Gear				
	gloves	Safety Glasses	Shoes	Riveting Gun
Tools				
	Power drill	Sleeve	Pencil	Tape Measure

- Clear a working area to allow access on 4 sides. A raised work surface will make assembly easier.
- Please choose a dry and calm day to start assembly. Do not attempt installation in rainy or windy day.
- **Keep roof clear of leaves and snow with long handled, soft-bristled broom. Heavy amounts to snow on roof can damage building, making it unsafe to enter.**
- All parts are identified so when working through the instructions page by page the diagrams show where each part is positioned.
- Before starting, to avoid any accidental injury, we recommend the use of gloves to protect your hands, safety glasses to protect your eyes and shoes or boots to protect your feet.
- Many of the holes have been pre-punched, to allow fixing using self-tapping screws or rivets, where additional holes are required a drill bit is included.
- Please keep children away from your construction site.
- Most assembly can be completed by one person, assistance may be needed when you reach the erection stage.
- Cleaning should be performed as often as is required to remove any dirt, salt, and pollutants.
- Please note: Some local government authorities have rules & regulations on shed installation and you may need approval to erect this shed.






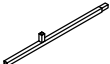
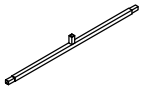
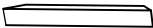
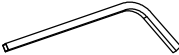
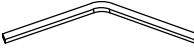






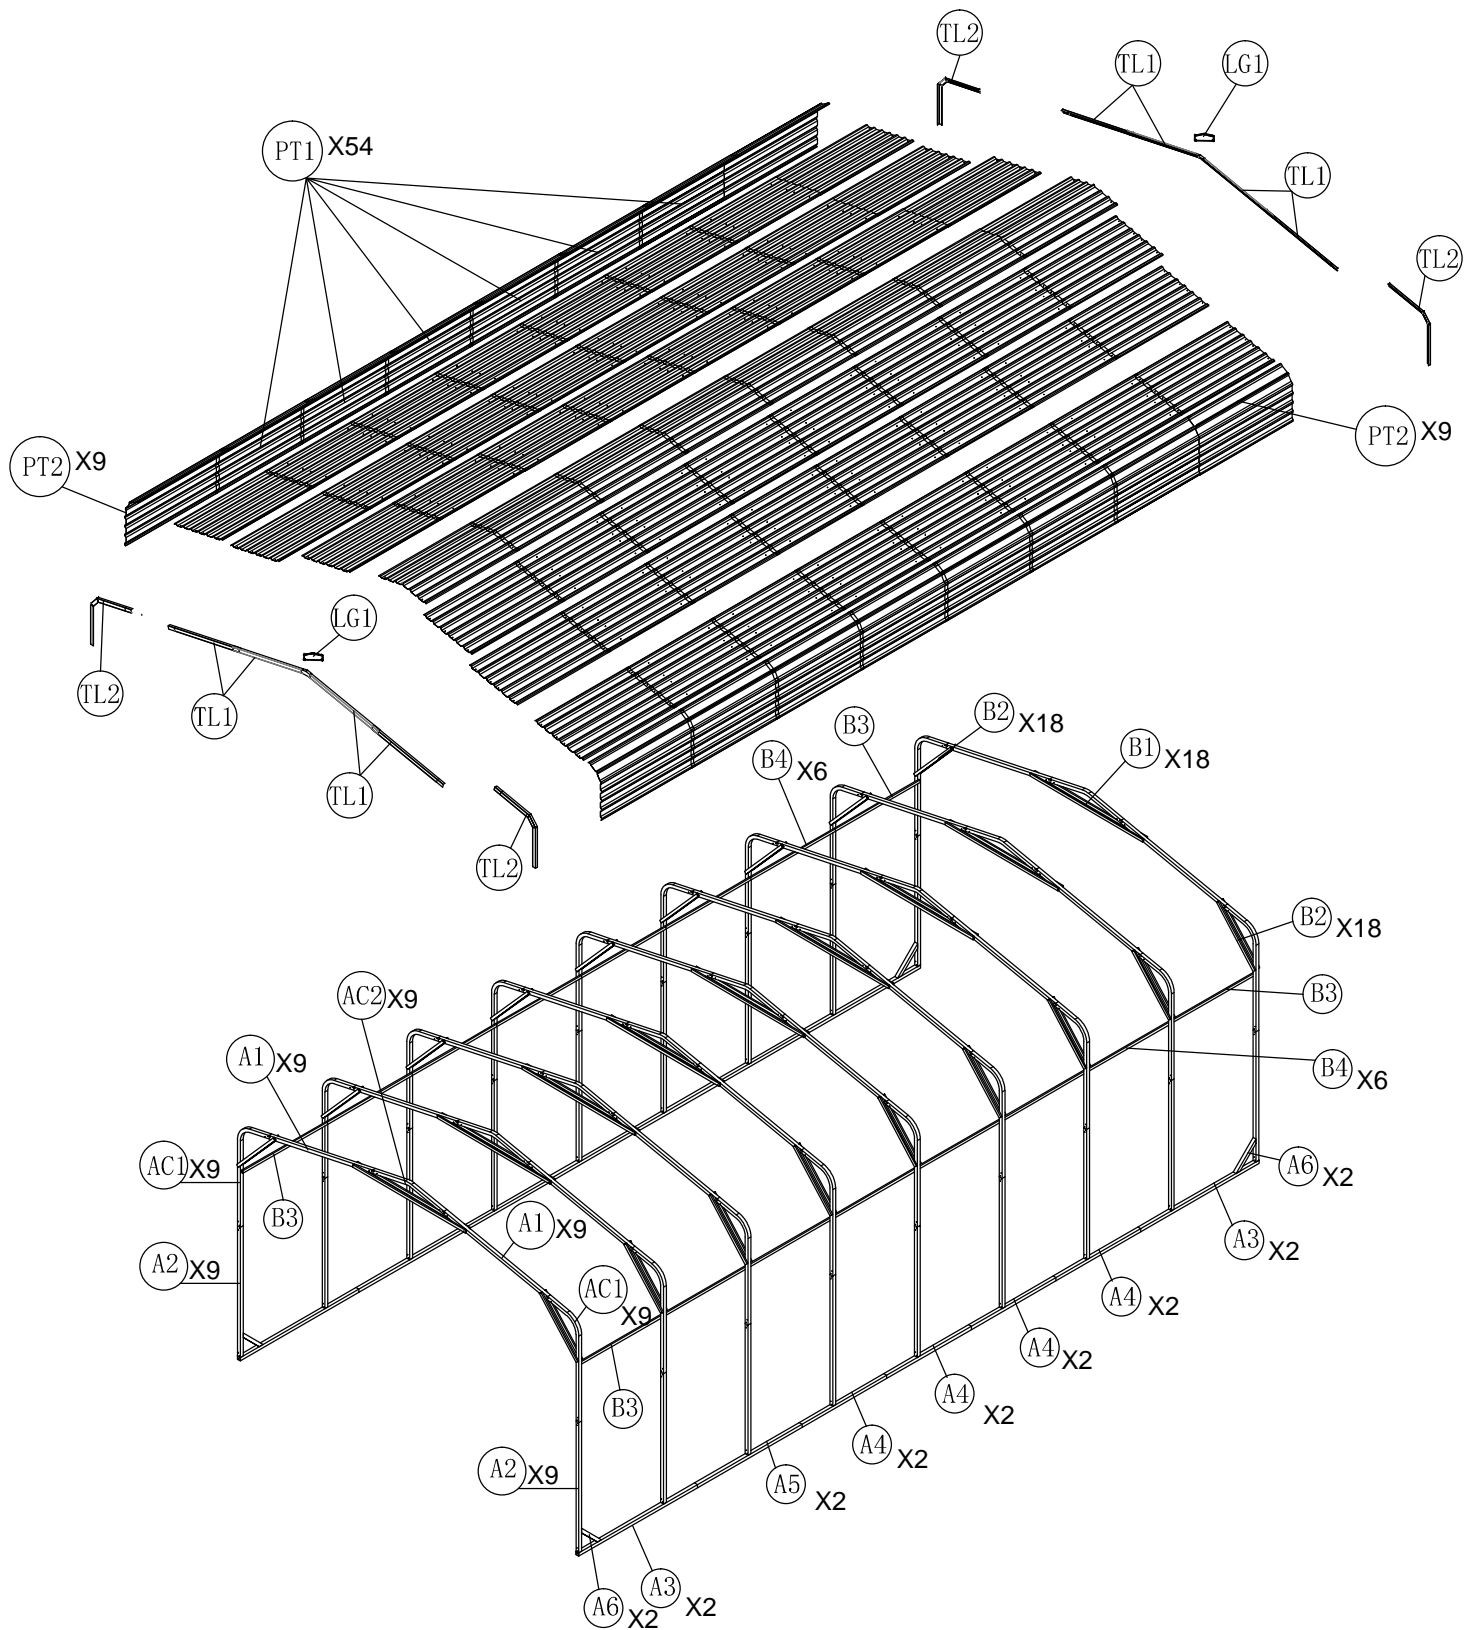







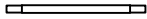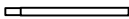
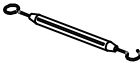

#### STEPS:

1. Unpack all components from the carton and lay outside your work area and check parts against the part list on the next page.
2. Work through assembly instructions Page by Page
3. When completed place shed in position and anchor securely to the ground.
4. Clean up all metal pieces, rivets and screws.

# FRAME ASSEMBLY

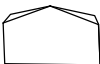


# PART LIST


Picture	Name	QTY	Check	Picture	Name	QTY	Check
	PT1	54			PT2	18	
	A1	18			A2	18	
	A3	4			A4	8	
	A5	2			A6	4	
	AC1	18			AC2	9	
	B1	18			B2	36	
	B3	4			B4	12	
	TL1	8			TL2	4	
	S12	742			S13	296	
	LG1	2			C72	14	
	S11	14			L5	4	
	L8	4			Steel wire collet	8	
	Ground anchor	4			Wire tensioner	4	
	wirerope	1					

FRAME ASSEMBLY

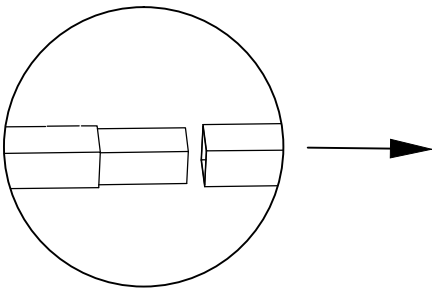




STEP 1

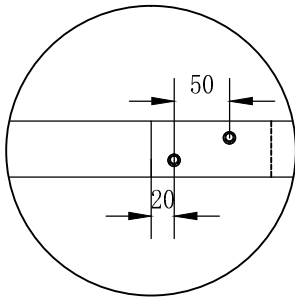


STEP 2






PART A


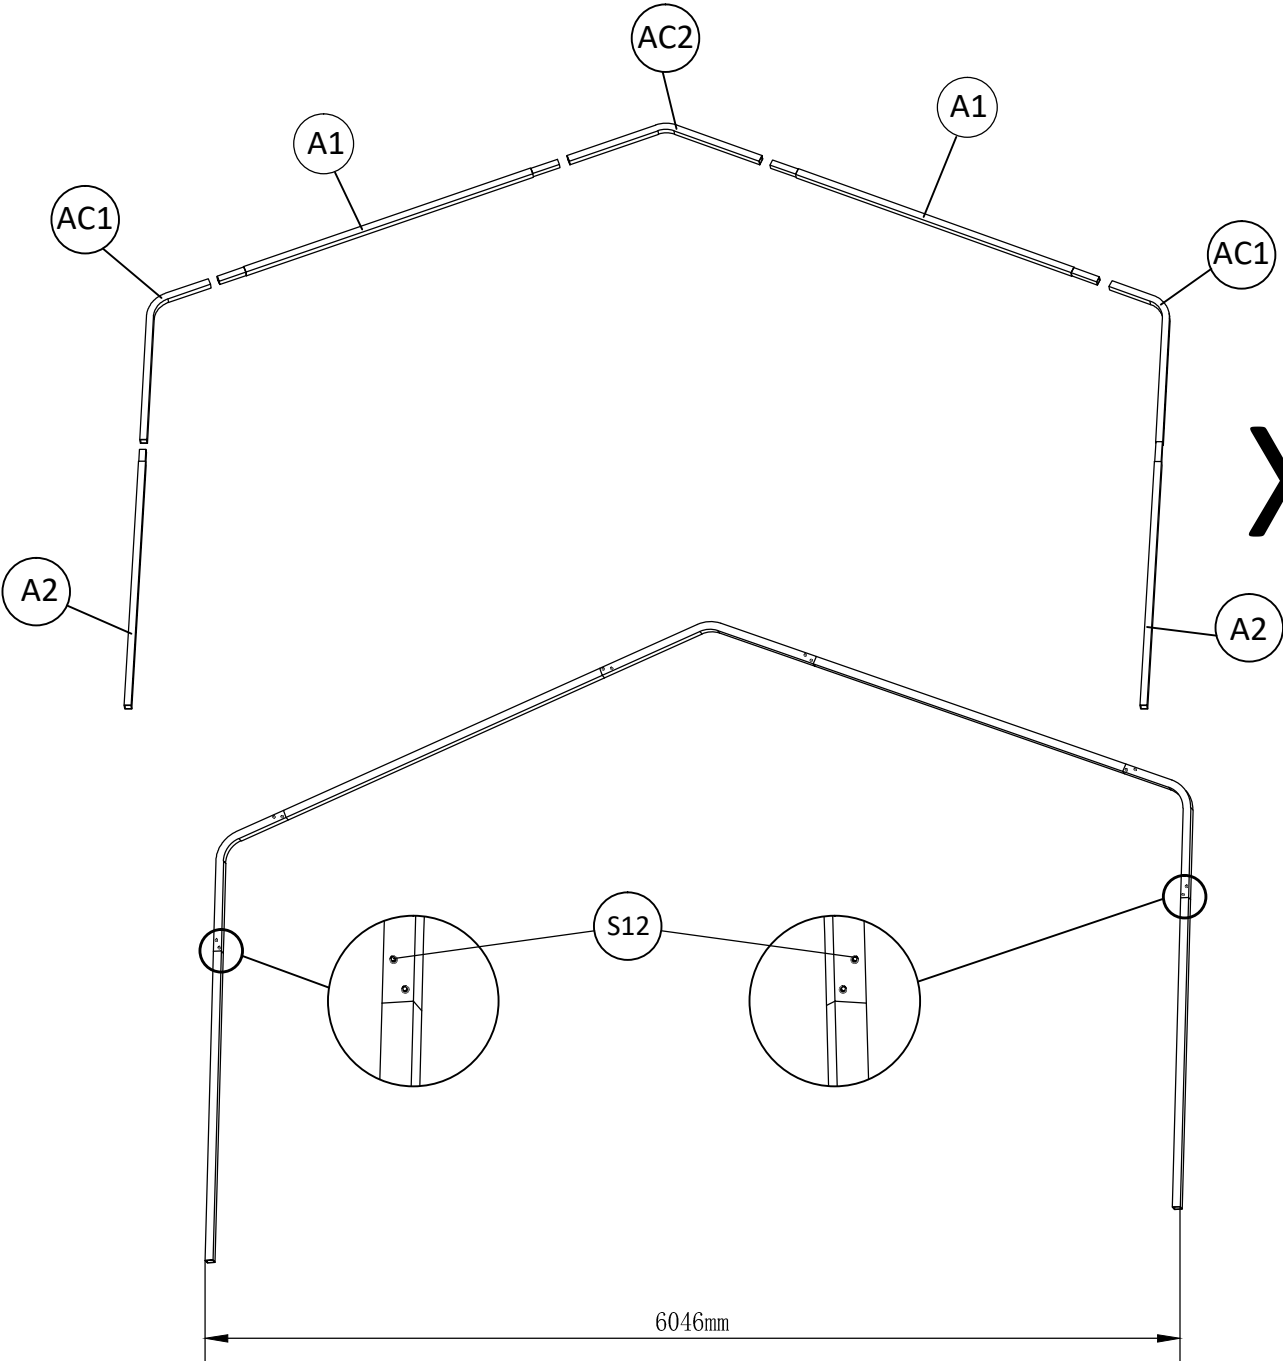
	A2	18		AC1	18		A1	18		AC2	9
	S12	216									







# FRAME ASSEMBLY

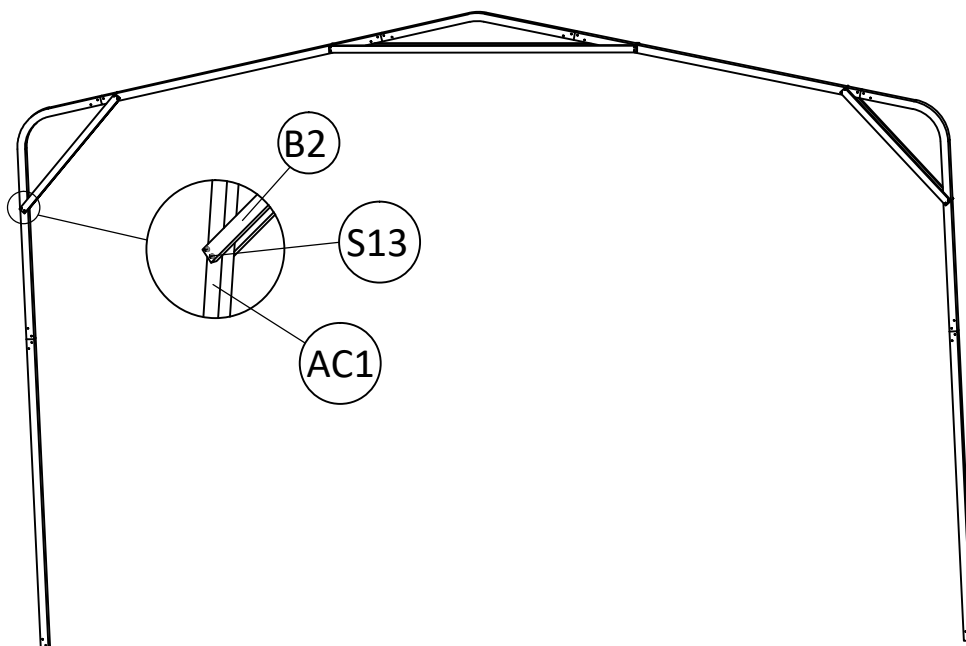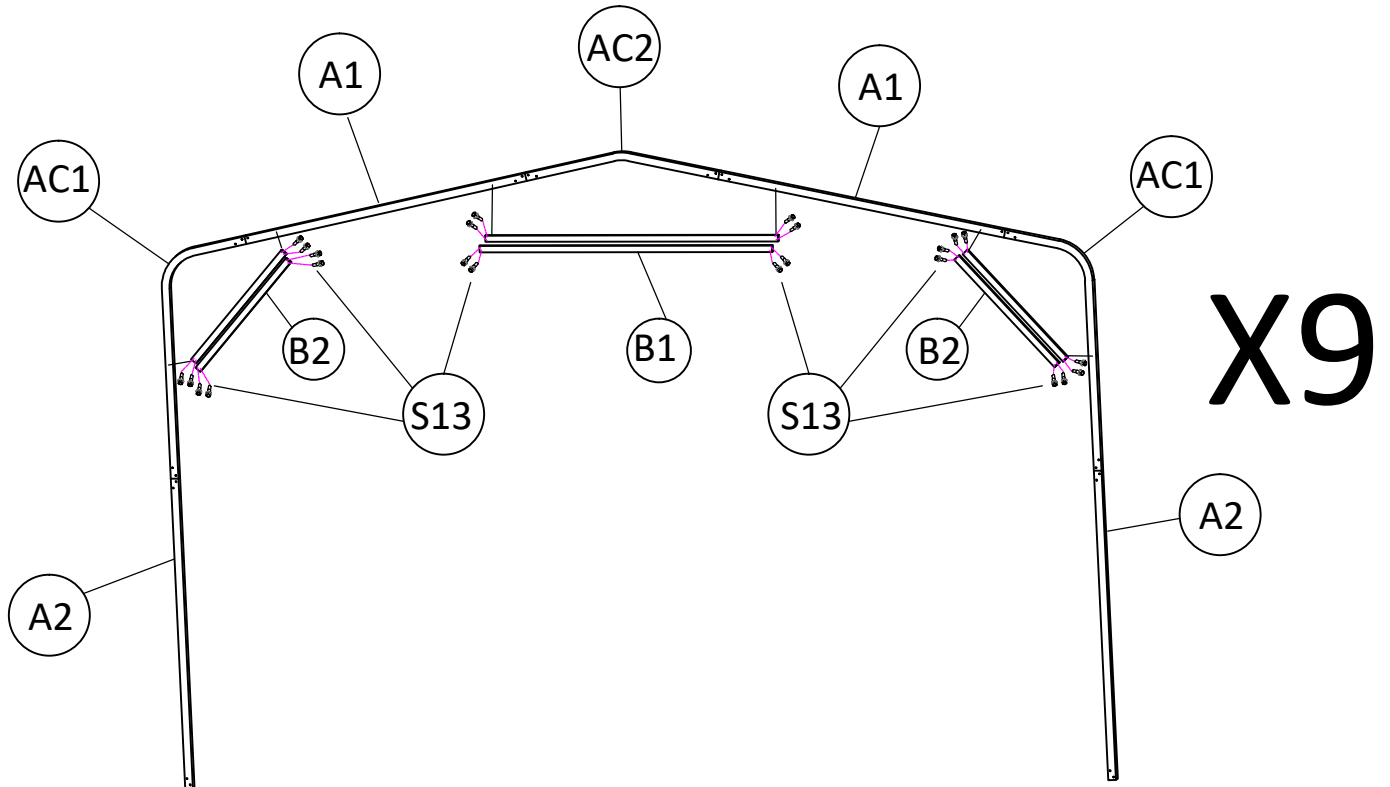	B2	36		B1	18
	S13	216			

## PART A




# FRAME ASSEMBLY


	A3	4		A4	8		A5	2		S12	48
---	----	---	---	----	---	---	----	---	---	-----	----

STEP 1

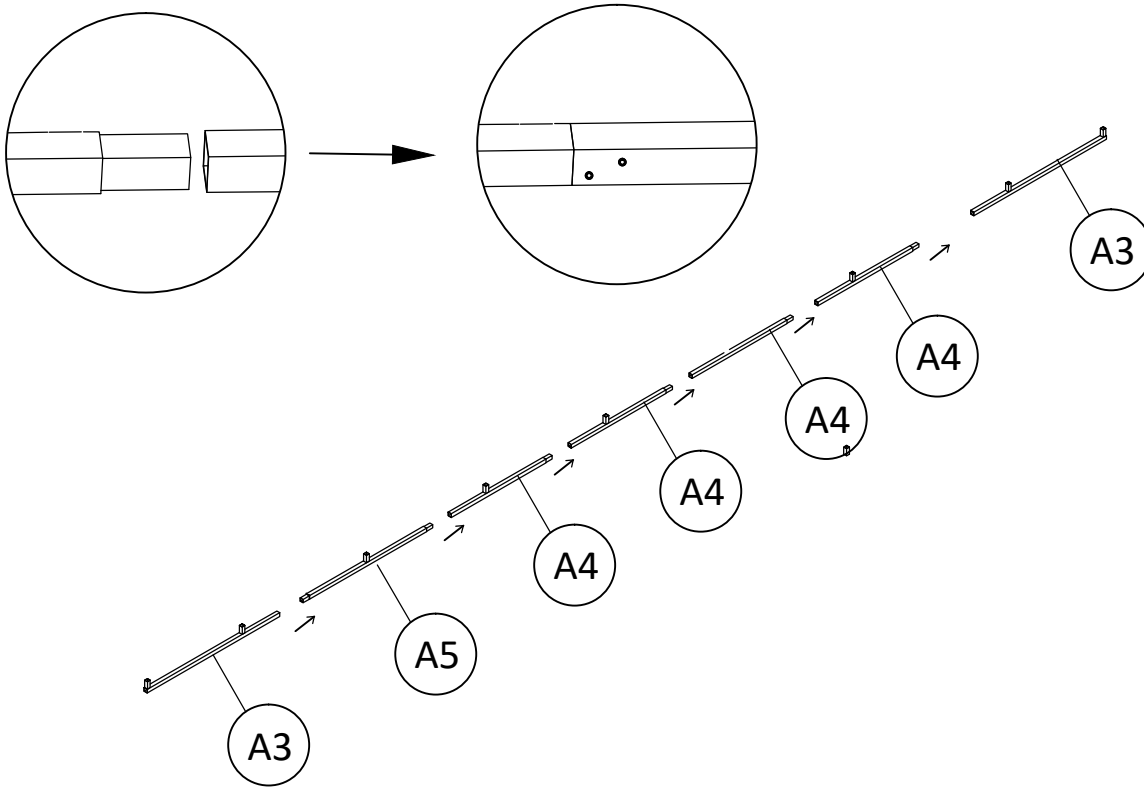


STEP 2




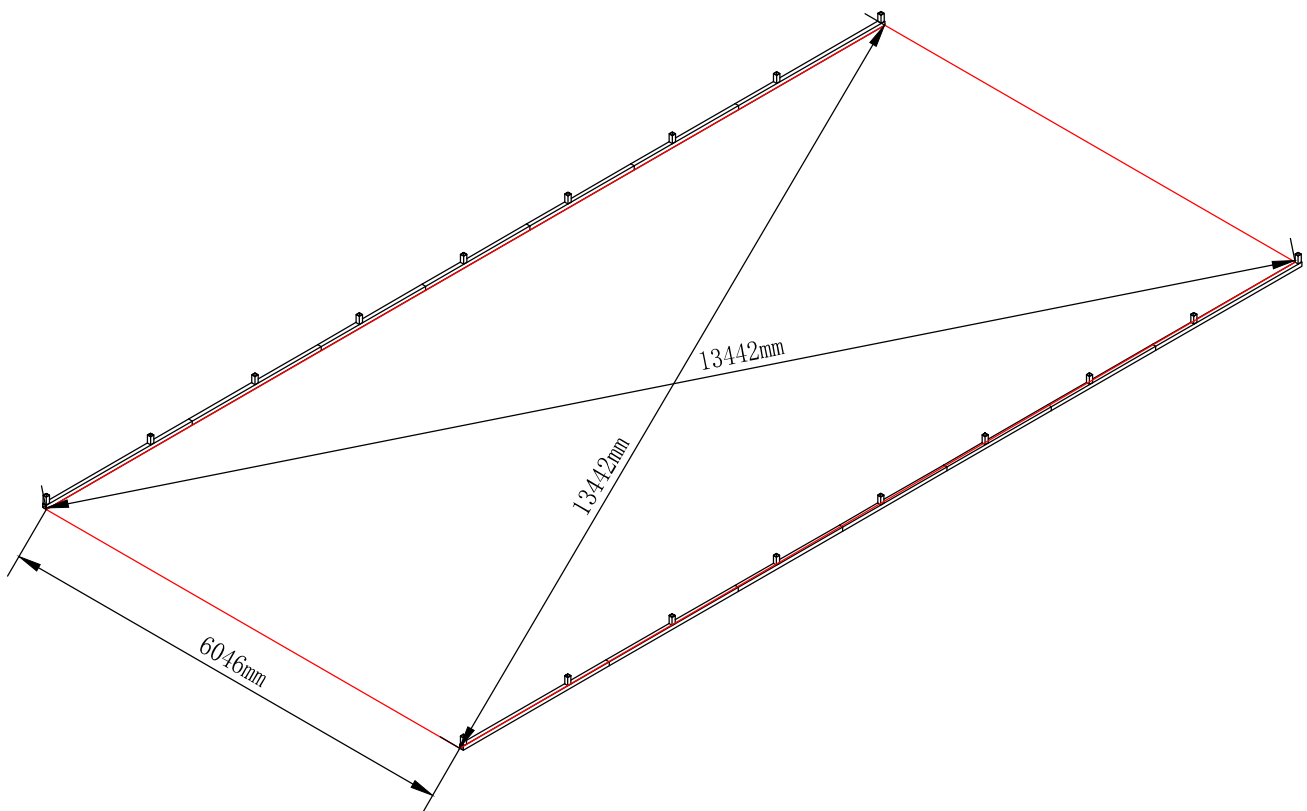




X2

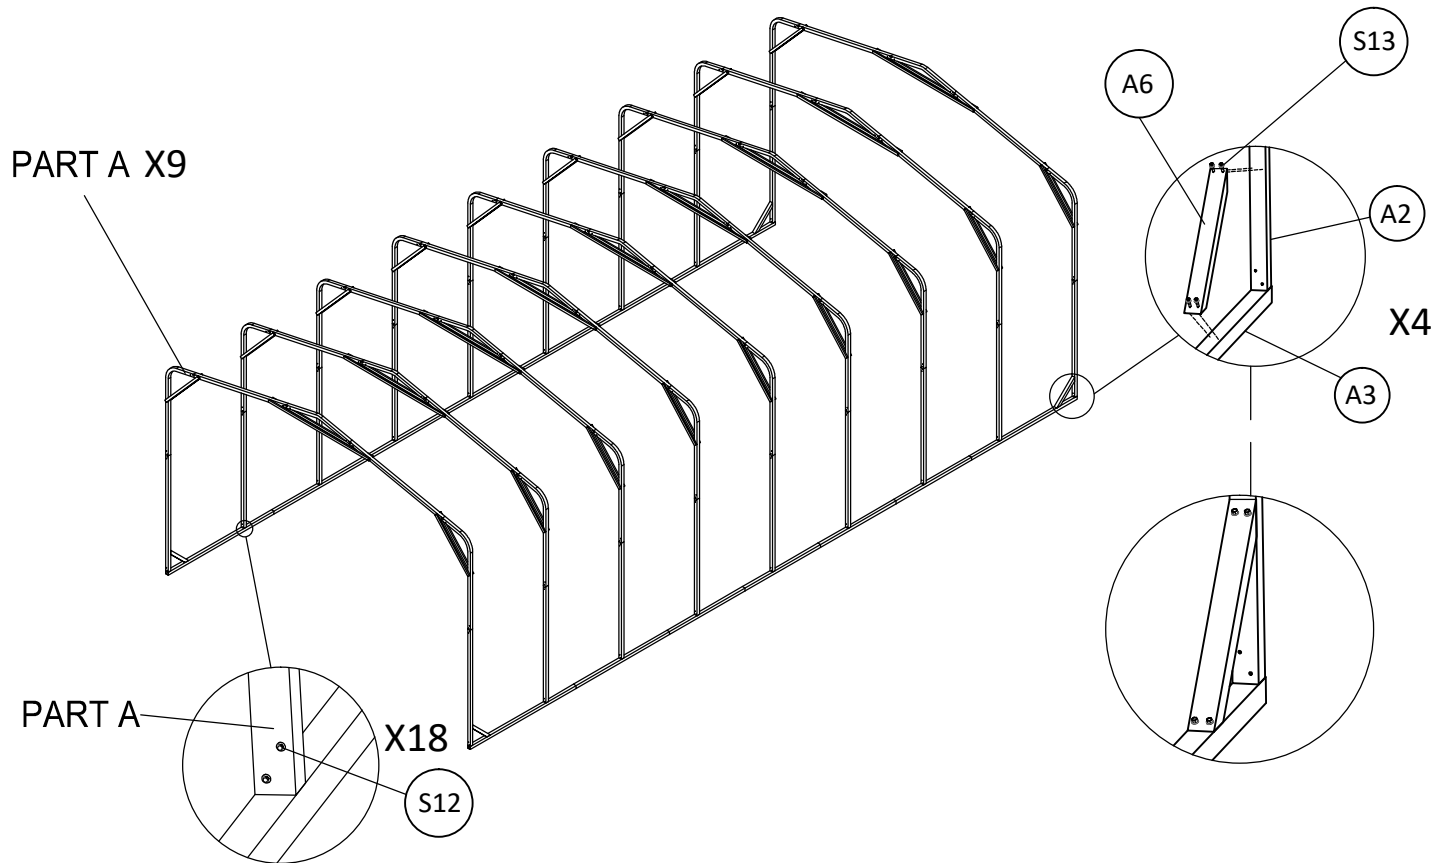


# FRAME ASSEMBLY

	A6	4		S12	72		S13	16
---	----	---	---	-----	----	---	-----	----





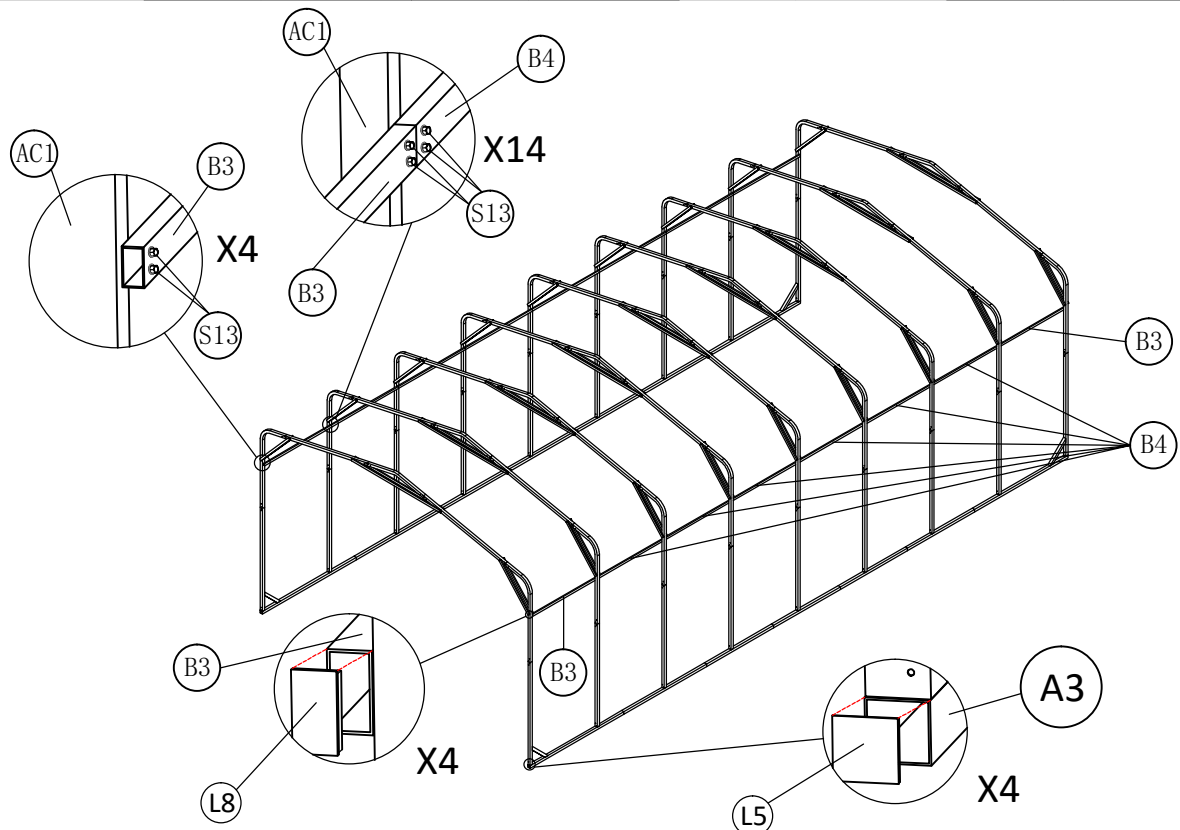


	B4	12		B3	4		S13	64		L5	4		L8	4
--	----	----	---	----	---	---	-----	----	---	----	---	---	----	---








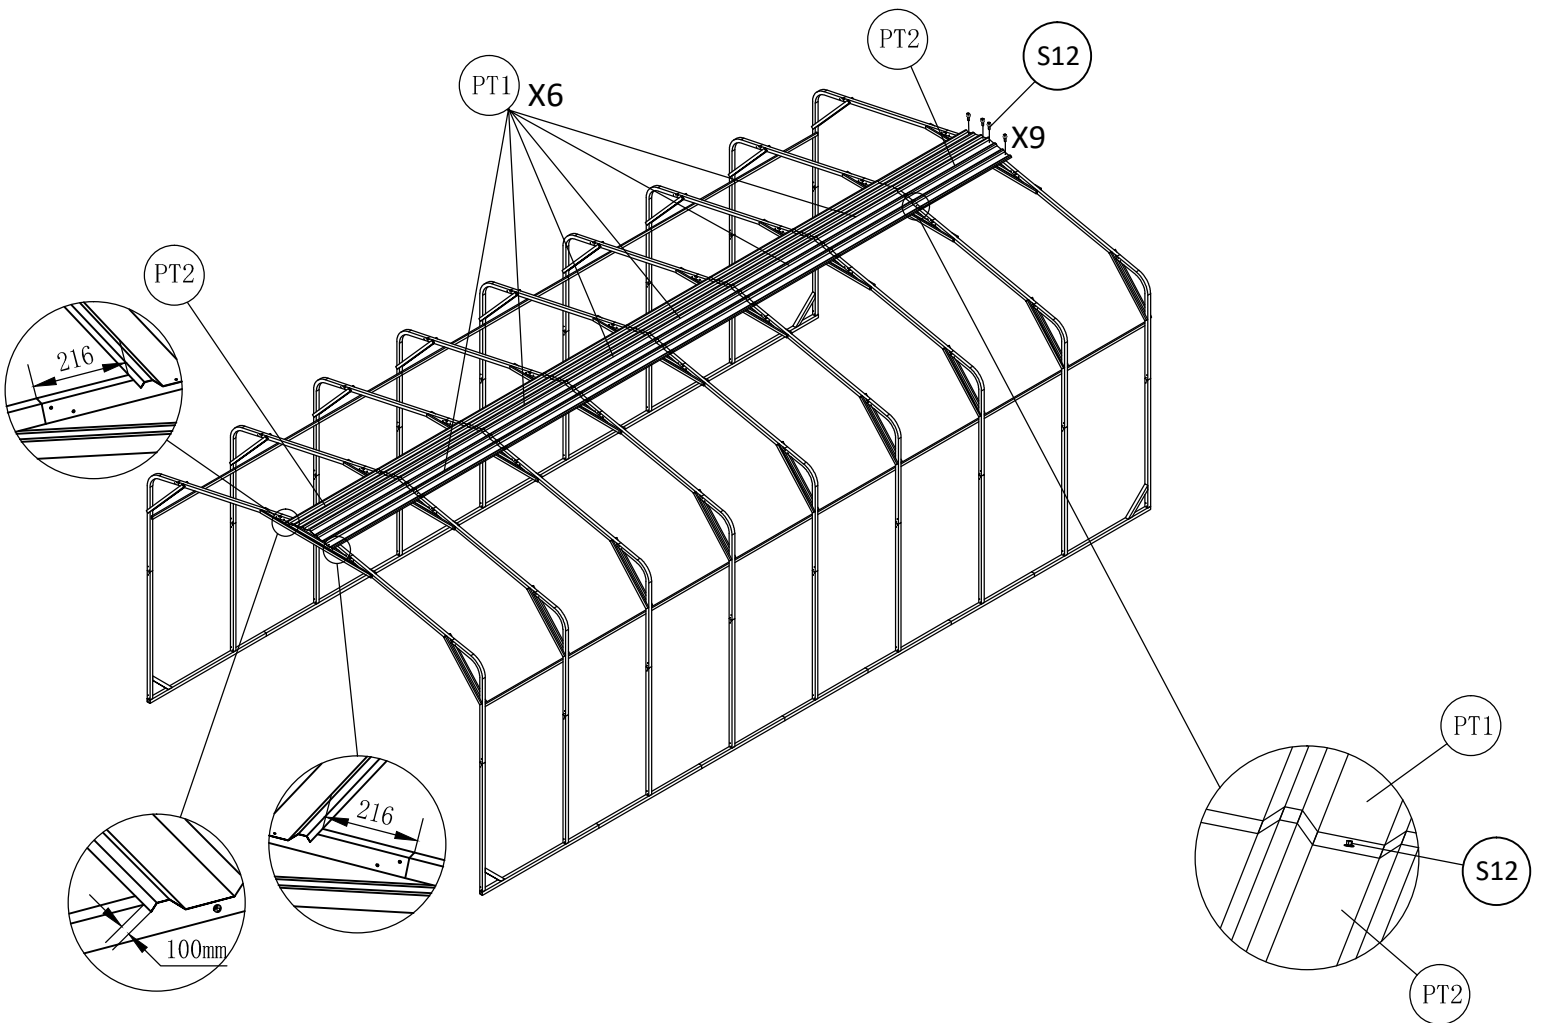
# FRAME ASSEMBLY

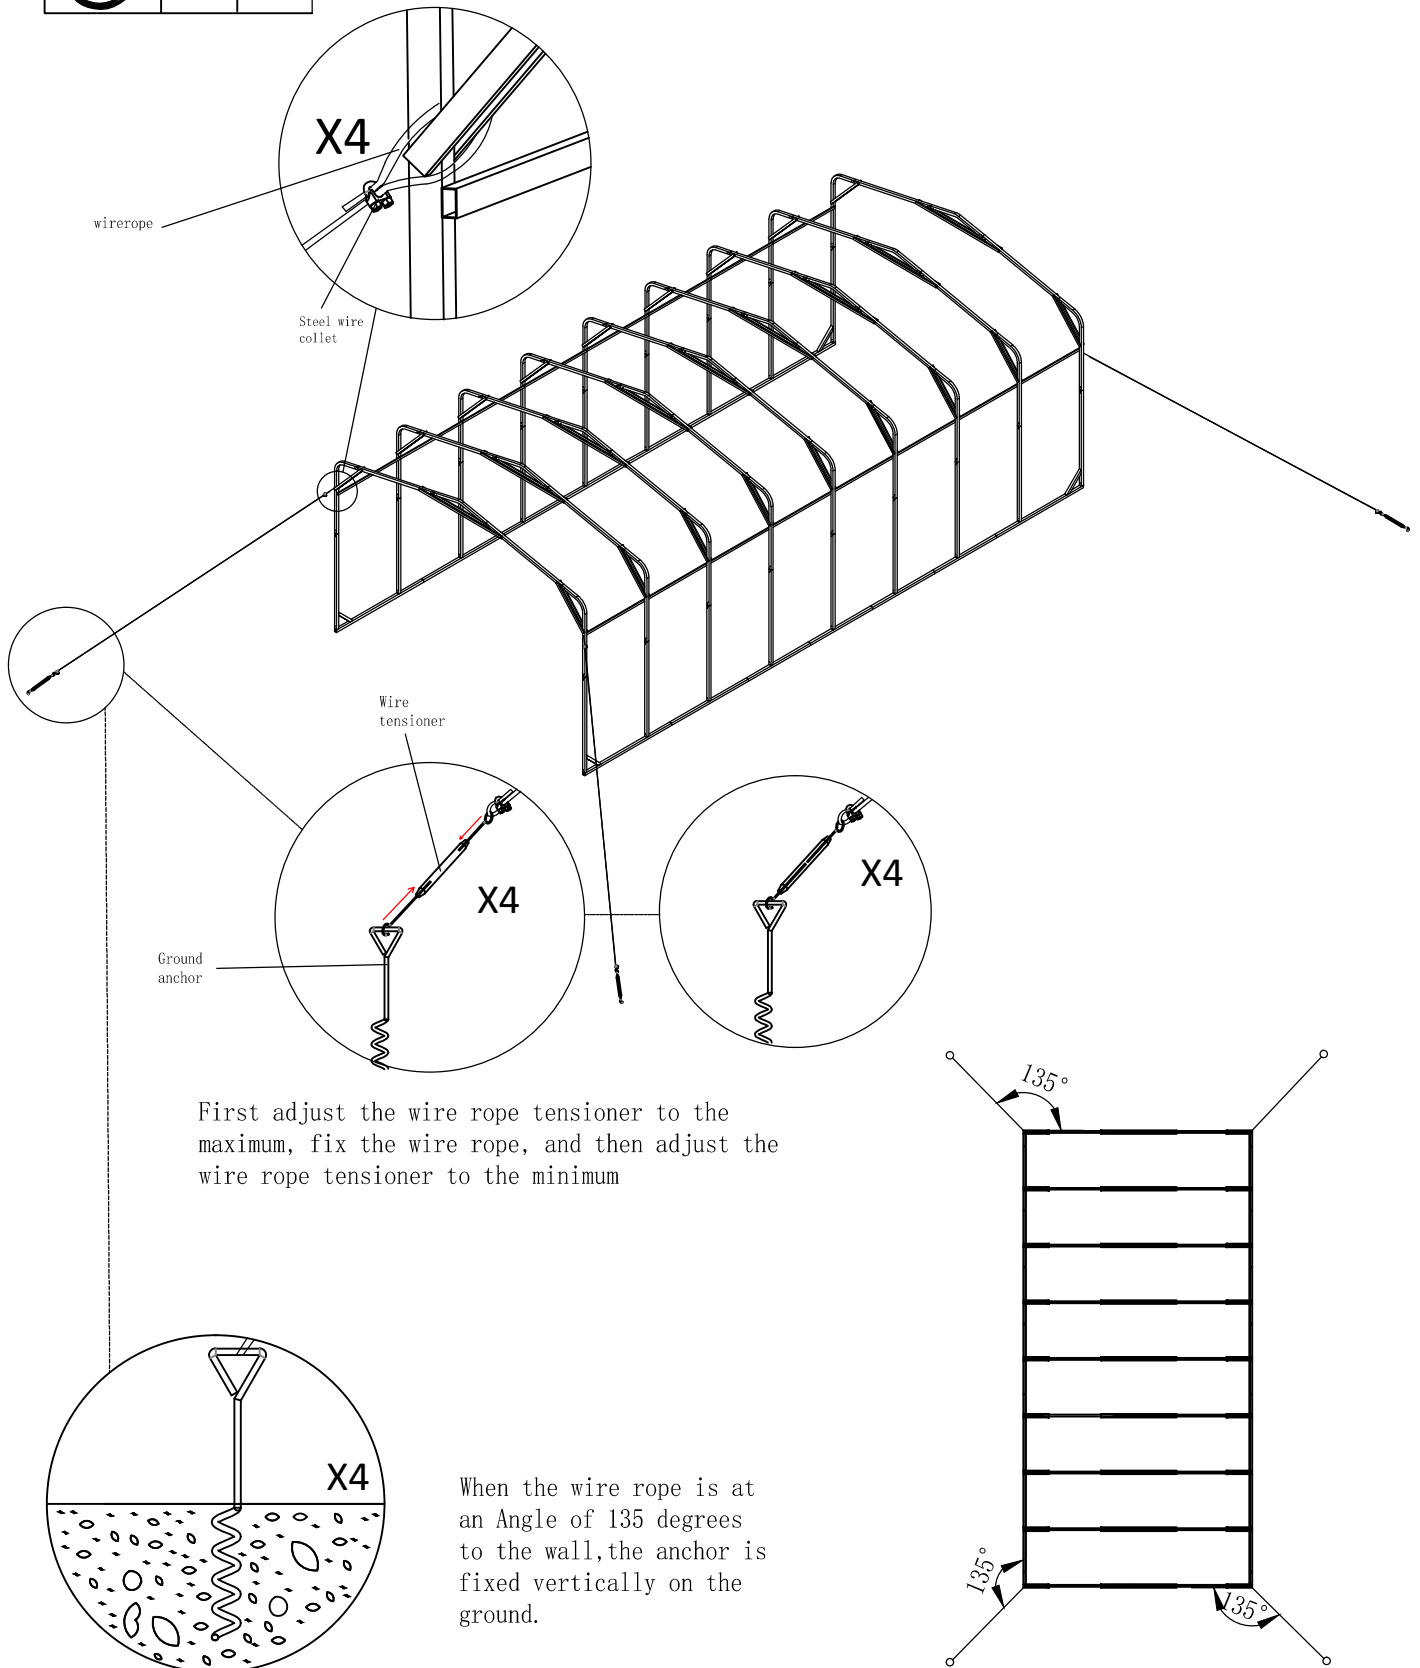

	Wire tensioner	4		Steel wire collet	8		Ground anchor	4
	wirerope	1						




# FRAME ASSEMBLY




	PT1	6		PT2	2		S12	36
---	-----	---	---	-----	---	---	-----	----

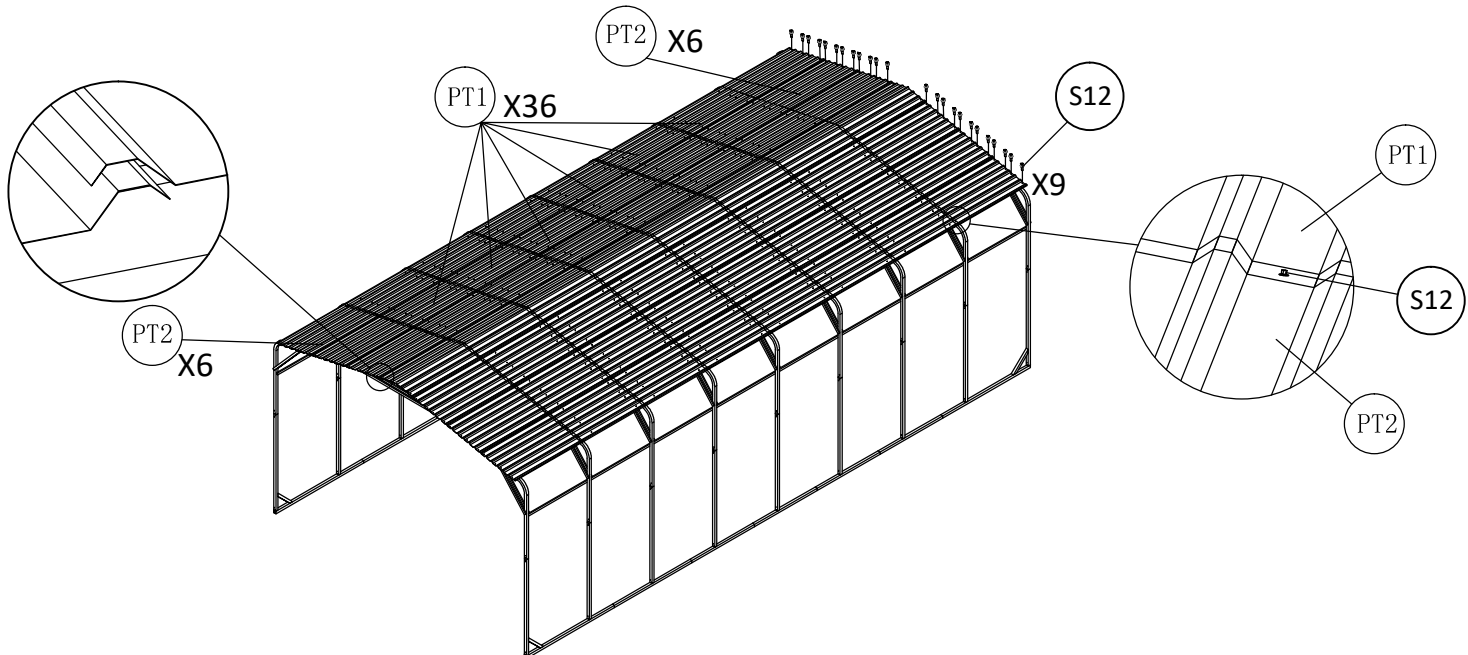


	PT1	36		PT2	12		S12	216
---	-----	----	---	-----	----	---	-----	-----






# FRAME ASSEMBLY

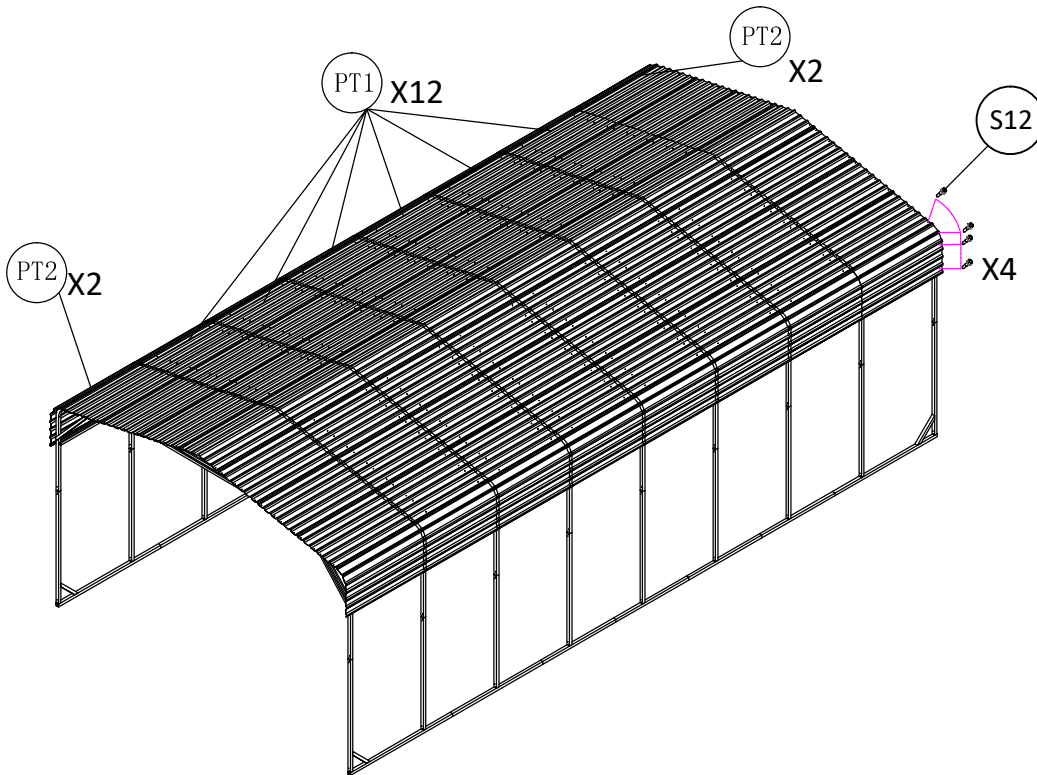
	PT1	12		PT2	4		S12	72
---	-----	----	---	-----	---	---	-----	----




NOTED: Both end of Panels PT1 have holes, Please noted the short holes space are connect with Panels PT2.

TIPS: If the connection effect of S12 is not good, you can use a S13 to strengthen



	S11	14		C72	14		S12	42
---	-----	----	---	-----	----	---	-----	----

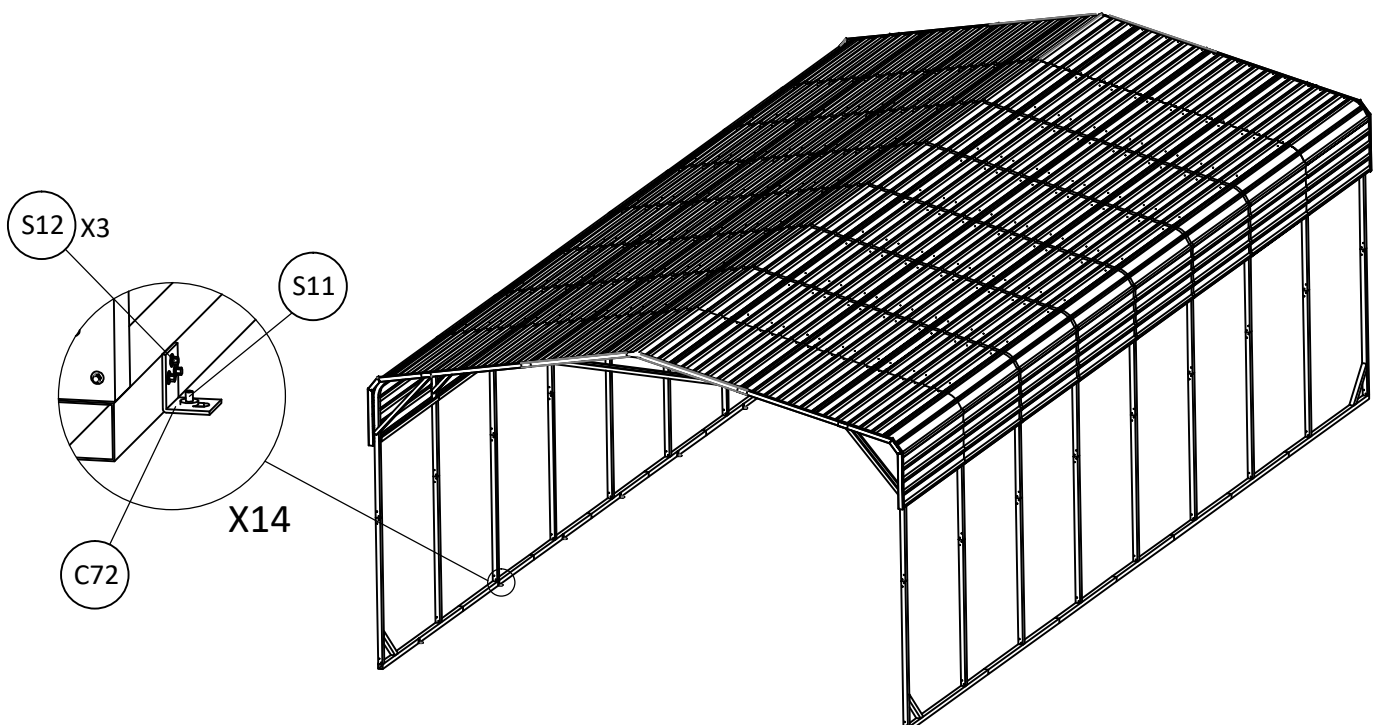


# ANCHORING CONSTRUCTION

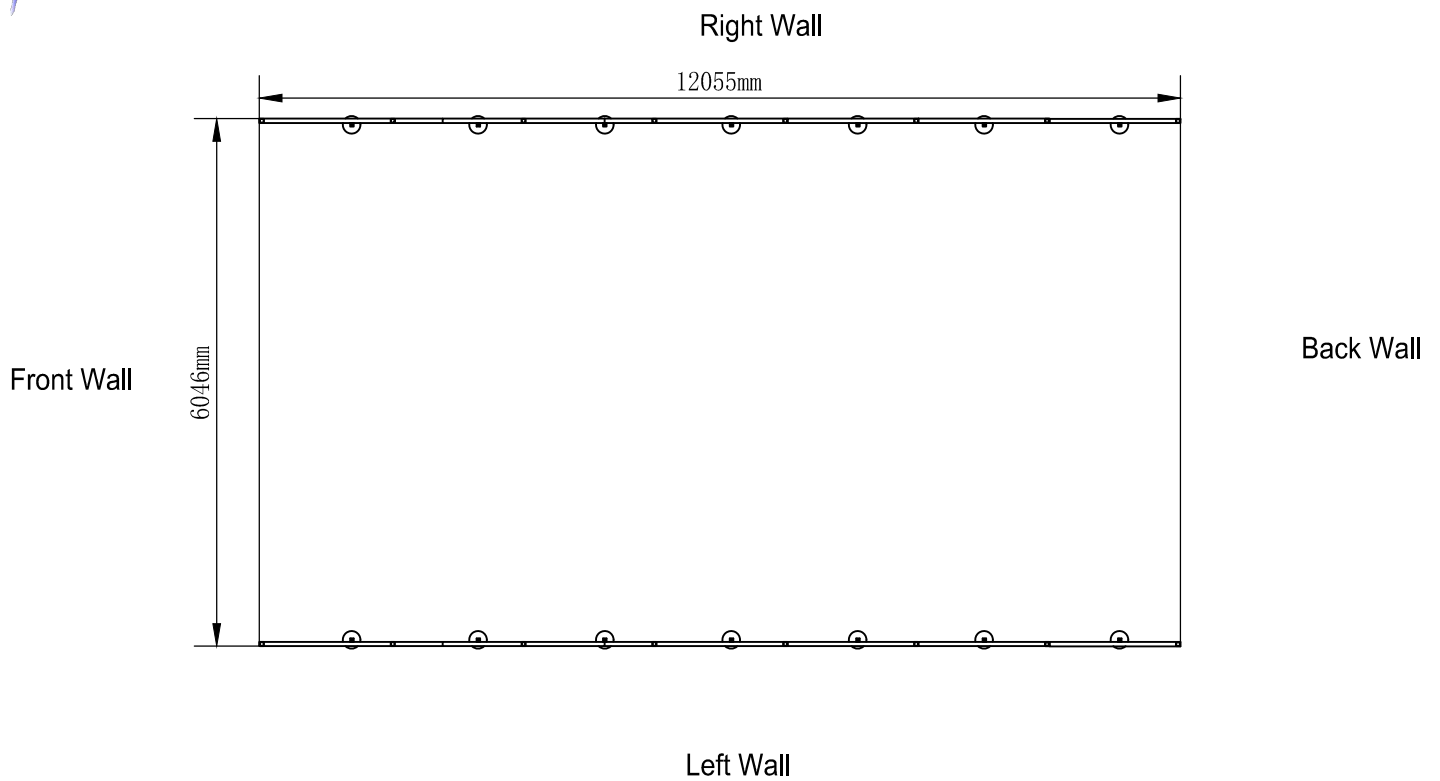




## ANCHORING OF CARPORT


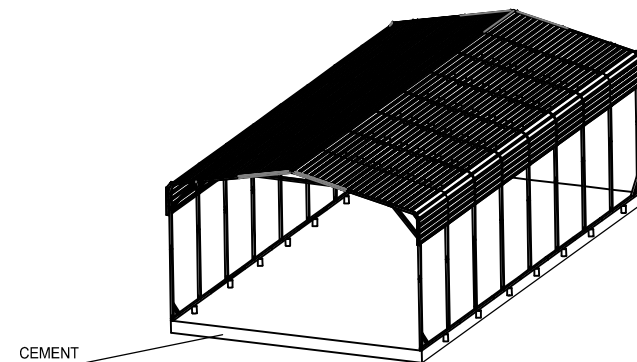
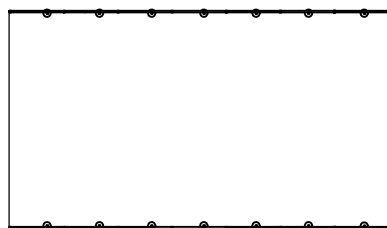


## ANCHORING INSTALLATION INSTRUCTION

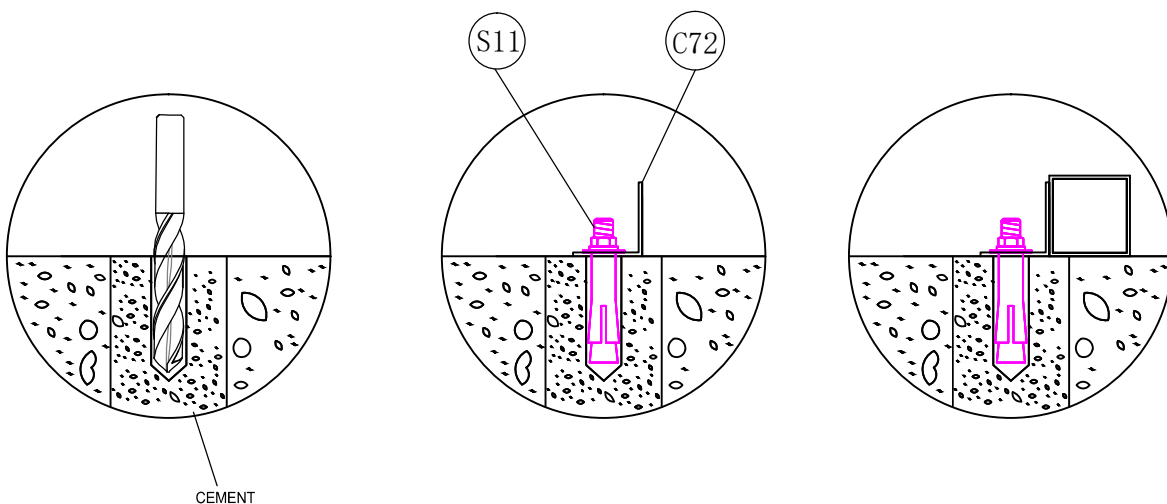



# FRAME ASSEMBLY

	TL1	8		TL2	4		S12	36
---	-----	---	---	-----	---	---	-----	----

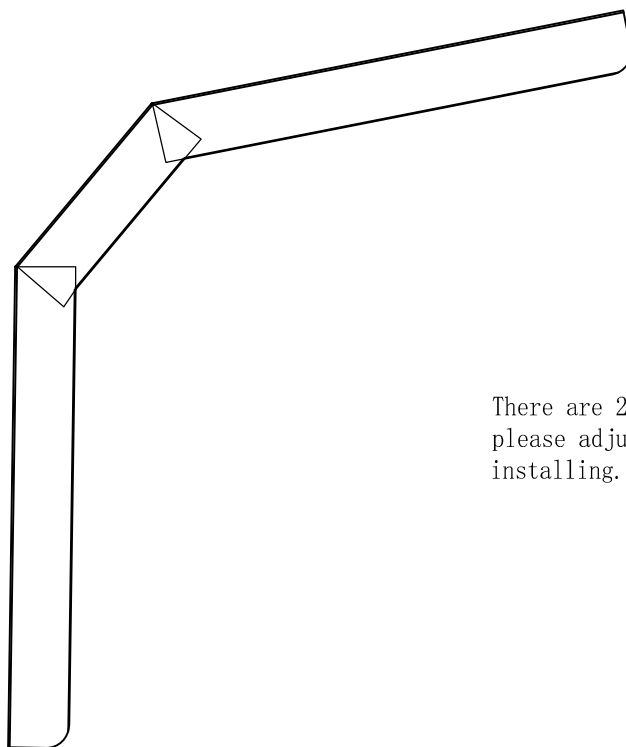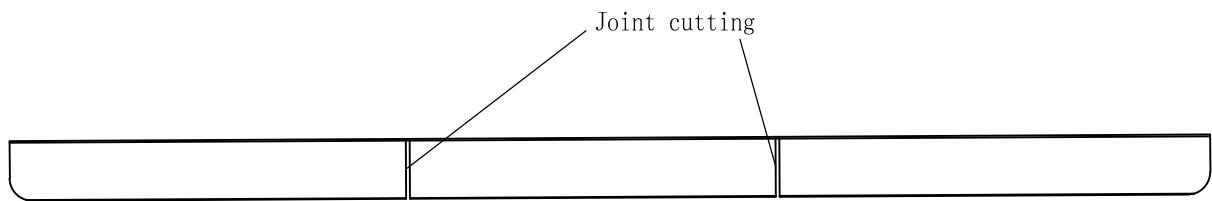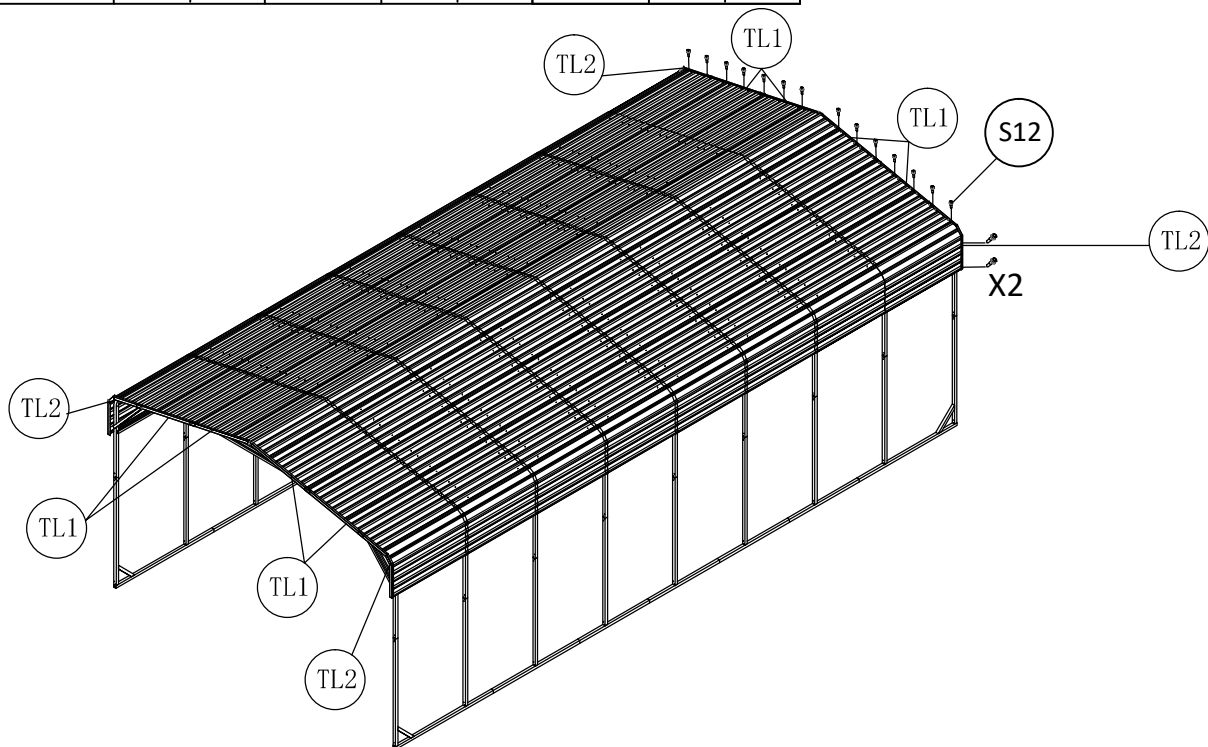

There are 2 joint-cutting on the TL2, please adjust the proper Angle when you installing.

# FRAME ASSEMBLY

	LG1	2		S12	4
---	-----	---	---	-----	---

